


LIFT

Heavy duty cleaner degreaser

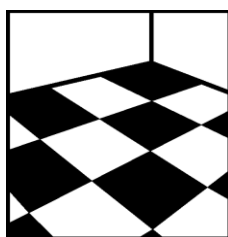

Description


Powerful multi purpose detergent developed for a wide range of cleaning applications in kitchens, food processing operations & general industry. Quickly removes grease & ingrained soil from a variety of hard surfaces, including cooker hoods, deep fat fryers, ovens, floors & walls.

Features & Benefits


- Easily removes fat, grease, oil & ingrained soiling.
- Very versatile product, effective in hard, soft, warm or cold water.
- Suitable for use on all hard washable surfaces.
- Unperfumed. Ideal for use in kitchens & food processing areas.
- Also removes heavy soil in engineering & general industry.
- Concentrated formulation for extra economy.
- Available in a ready to use formulation in 750ml trigger spray bottle.
- **Low Environmental Impact Product – see www.evansgreentick.com**

How to Use

GENERAL CLEANING:

Dilute 1:250 parts water (20ml per 5lt)
1x  or 2 tbsp. per 5lt.
Mop, wipe or spray surface.

HEAVY SOILING & GREASE:

Dilute 1:50 parts water (100ml per 5lt)
3x  or ½ cupful per 5lt.
Mop, wipe or spray surface.

FOR CLEANING DEEP FAT FRYERS:

Switch off, drain out oil & remove oil deposits. Dilute 1:25 (400ml) (2cupful) per 10lt cold water in fryer. Submerge basket & utensils in solution & soak overnight. Rinse with clean water & allow to air dry.

*FOR MORE DETAILED INFORMATION PLEASE REFER TO
EVANS GUIDE TO KITCHEN HYGIENE*

Composition

Contains a blend of sodium metasilicate, anionic & Nonionic surfactant, sequestering agent, solubiliser & glycol ether.

Typical Product Data

Appearance:	Clear liquid
Odour:	Characteristic
Specific Gravity (20°C):	1.084
Colour:	Pale straw
pH – undiluted:	13.45
pH – diluted 1:50:	11.60
Shelf Life Unopened:	3 years

Packaging

Pack:	Order Code	Pallet Size
5lt	A054E	120x5lt

Storage:

Store in original sealed container and protect from extremes of temperature.

Biodegradability:

All surfactants used in Evans Vanodine products comply with the current European Regulations concerning Biodegradability and protection of the environment.

Quality Assurance

This product is manufactured in the U.K. by EVANS VANODINE INTERNATIONAL PLC whose Quality System is registered by THE BRITISH STANDARDS INSTITUTION Cert of Reg. No. FM 09535

Revision Date: 27/06/11



EVANS VANODINE INTERNATIONAL PLC

Brierley Road, Walton Summit, Preston, Lancashire, PR5 8AH, England

Telephone: +44 (0) 1772 322200 - Fax: +44 (0) 1772 626000

Web: www.evansvanodine.co.uk – Email: sales@evansvanodine.co.uk

P.35